



USER'S GUIDE

V:1327-0504-10



---

## D190B DVD Player

---

*For the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)*

## WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRECAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Main plug is used as disconnect device and it should remain readily operable during intended use.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

*No mezcle baterías viejas y nuevas.*

*No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION**  
RISQUE D'ÉLECTROCUTION  
NE PAS OUVRIER

**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This Laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC WARNINGS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ADDITIONAL WARNINGS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.


*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.  
*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*

- Caution marking is located at the rear of the apparatus.  
*Les marquages sont inscrits de derrière de l'appareil.*

- The marking information is located at the rear of apparatus.  
*Les précautions d'emploi sont inscrites de derrière de l'appareil.*

-  This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

## DVD PLAYER

### FEATURES

- Supports: DVD+/-R/RW, CD-R/RW, JPEG CD
- Progressive scan
- Component video output
- Coaxial digital audio output
- Composite video output
- Stereo audio output
- Remote control
- Multi-language on-screen display
- Aspect ratio: 16:9, 4:3
- NTSC
- AC power: attached AC power cable

### INCLUDED

- D190B
- Remote control, requires 2 AAA batteries (not included)
- RCA audio/video cable
- Warranty card
- User's guide

## TABLE OF CONTENTS

 
<b>INTRODUCTION</b>	<b>6</b>
<b>SETUP</b>	<b>8</b>
<b>ADVANCED SETUP</b>	<b>9</b>
<b>PLAYING A DISC</b>	<b>10</b>
<b>DVD SETUP MENU</b>	<b>11</b>
<b>COMPANY INFORMATION</b>	<b>12</b>

# INTRODUCTION

**DISC DRAWER**

**OPEN/CLOSE**  
Press to open or close the DISC DRAWER.

**POWER**  
Press to power the DVD player off or on.

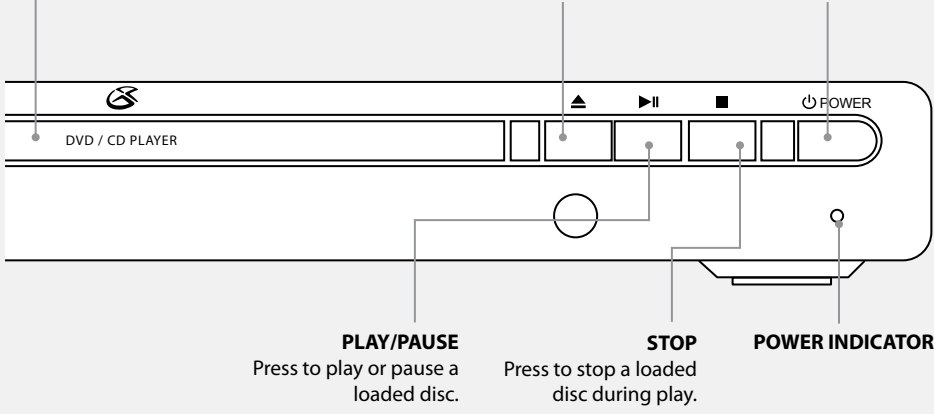


**PLAY/PAUSE**  
Press to play or pause a loaded disc.

**STOP**  
Press to stop a loaded disc during play.

**POWER INDICATOR**

 **COMPONENT VIDEO OUTPUT**

**COMPOSITE VIDEO OUTPUT**

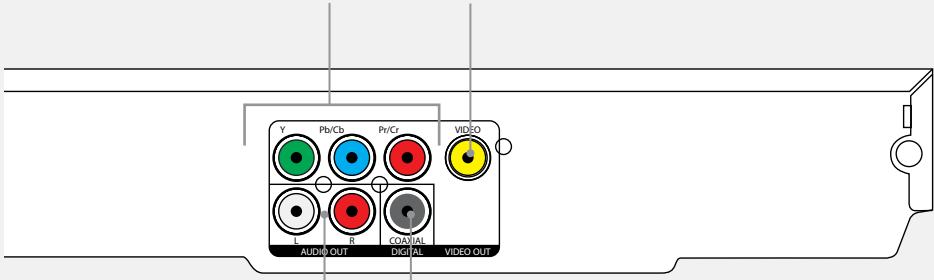

**STEREO AUDIO OUTPUTS**

**COAXIAL DIGITAL AUDIO OUTPUT**

**MUTE**  
Press to mute the volume.

**OPEN/CLOSE**  
Press to open or close the DISC DRAWER.

**NUMBER KEYPAD**

**TITLE**  
Press to access the title menu on a loaded DVD.

**MENU**  
Press to access the main menu on a loaded DVD.

**DIRECTION/ENTER**  
Press to navigate and make selections on on-screen menus.

**SEARCH**  
Press to search forwards or backwards through a loaded disc.

**VOLUME**  
Press to adjust the volume.

**WIDE**  
Press to adjust the aspect ratio.

**OSD**  
Press to view the on-screen display.

 
**STOP**  
Press to stop a disc during play.

**N/P**  
Press to switch between NTSC and PAL.

**L/R**  
Press to adjust the audio mode of a supported DVD.

**PROG**  
Press to program a loaded disc to play chapters or tracks in a specified order.

**VIDEO**  
Press to switch between the COMPONENT and COMPOSITE VIDEO OUTPUTS.

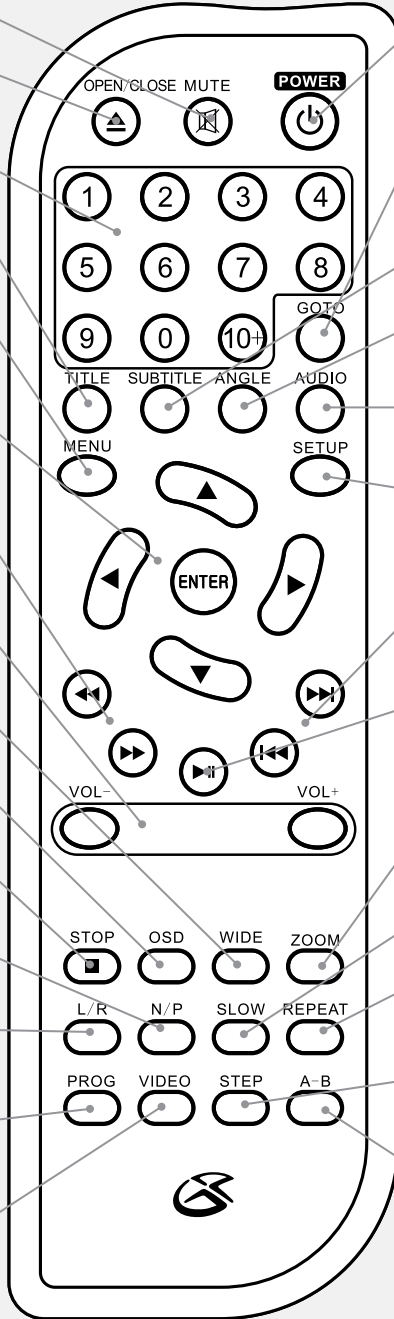

**POWER**  
Press to power the DVD player off or on.

**GOTO**  
Press and use the on-screen display to go to a specified track, chapter, or time on a loaded disc.

**SUBTITLE**  
Press to switch between available subtitle modes.

**ANGLE**  
Press to adjust the viewing angle on supported DVDs.

**AUDIO**  
Press to switch between available audio modes.

**SETUP**  
Press to access the setup menu.

**SKIP**  
Press to skip forwards or backwards through a loaded disc.

**PLAY/PAUSE**  
Press to play or pause a loaded disc.

**ZOOM**  
Press to zoom in or out on a playing DVD.

**SLOW**  
Press to view the loaded DVD in slow motion.

**REPEAT**  
Press to repeat the current chapter or track or an entire disc.


**STEP**  
Press repeatedly to view the loaded DVD one frame at a time.

**A-B**  
Use to create a repeating loop on a loaded DVD.

## SETUP

 
### POWER

Plug the attached AC cord into a standard AC power outlet to power the home theater system.

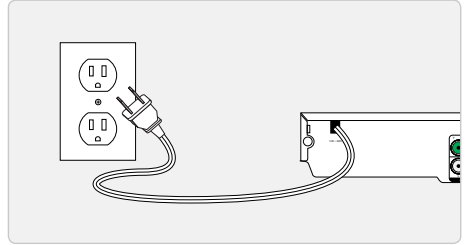


### REMOTE

 Requires 2 AAA size batteries (not included)

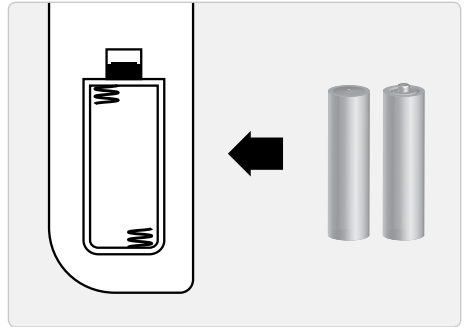



### COMPOSITE VIDEO

 - 1 Plug the included RCA audio/video cable into the **COMPOSITE VIDEO OUTPUT** (yellow) on the DVD player and the composite video input (yellow) on a television.
- 2 Plug the remaining plugs on the included RCA audio/video cable into the **RCA STEREO AUDIO OUTPUTS** (red and white) on the DVD player and the RCA stereo audio inputs (red and white) on a television.
- 3 Adjust the television's input setting to correspond to the inputs used when connecting the DVD player.

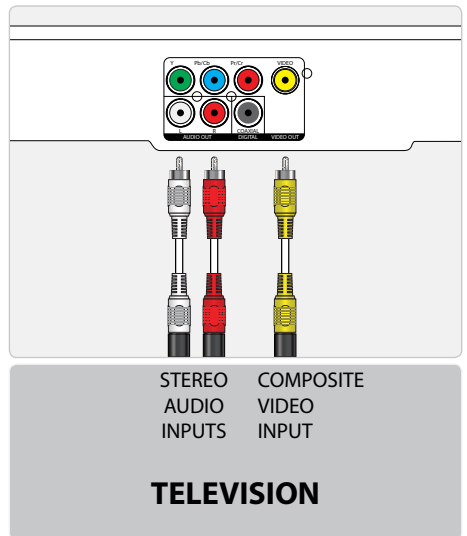

## TELEVISION

  
### COMPONENT VIDEO INPUT

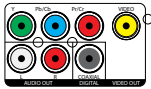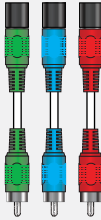

## COMPONENT VIDEO

Requires a component video cable (not included).

 - 1 Plug a component video cable into the **COMPONENT VIDEO OUTPUTS** (green, blue, red) on the DVD player and the component video input (green, blue, red) on a television.
- 2 Plug the included RCA audio/video cable into the **RCA STEREO AUDIO OUTPUTS** (red and white) on the DVD player and the RCA stereo audio inputs (red and white) on a television.
- 3 Adjust the television's input setting to correspond to the inputs used when connecting the DVD player.

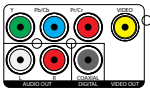

### DIGITAL AUDIO INPUT

## DIGITAL AUDIO

Requires a coaxial digital audio cable (not included).

- 1 Plug a coaxial digital audio cable into the **COAXIAL DIGITAL AUDIO OUTPUT** on the DVD player and the coaxial digital audio input on a television or stereo system.
- 2 Adjust the television or stereo system's input setting to correspond to the input used when connecting the DVD player.

## STEREO SYSTEM

## PLAYING A DISC

### PLAYING THE DVD OR CD

- 1 Connect the DVD player to a television and press the **POWER** button to turn the DVD player on.
- 2 Press the **OPEN/CLOSE** button to open the **DISC DRAWER**.
- 3 Load a disc into the **DISC DRAWER**, label side facing up, and press the **OPEN/CLOSE** button to close the **DISC DRAWER**.
- 4 The loaded disc will begin playing automatically. If it does not, press the **PLAY/PAUSE** button.

### PROGRAMMING A DVD OR CD

- 1 Follow the instructions for “Playing a DVD or CD”.
- 2 Press the **PROG** button on the remote.
- 3 Press the **DIRECTION** buttons to highlight the blanks under title, chapter, or track.
- 4 Use the **NUMBER KEYPAD** on the remote to enter in the title, chapter, or track number you wish to program.
- 5 Highlight and press the on-screen **PLAY** button using the **ENTER** button.
- 6 To cancel the program, highlight the on-screen **CLEAR PROGRAM** button and press the **ENTER** button on the remote.

### PLAYING A JPEG DISC

- 1 Load a JPEG disc into the **DISC DRAWER**.
- 2 A slide show of JPEG photos from the CD will begin playing automatically.
- 3 Press the **STOP** button to access a file view of the loaded JPEG disc.
- 4 Use the **DIRECTION/ENTER** buttons on the remote to select and view photos.

## ACCESSING THE SETUP MENU

- 1 Press the **SETUP** button on the remote to access the DVD setup menu.

## SETUP MENU

### LANGUAGE

- OSD language
- Subtitle
- Audio
- DVD menu

### VIDEO

- Aspect Ratio
- TV System
- Video Out
- Smart Picture

### AUDIO

- Digital Output
- Night Mode
- Down Sampling

### MISCELLANEOUS

- Use Default Settings
- Screen Saver

## COMPANY INFORMATION

### INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

### CONTACT INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

Parts Email: [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

Website: [www.gpx.com](http://www.gpx.com)