



# MW338B 1GB INSTRUCTION MANUAL

## Contents

Warnings & Precautions .....	2
Important Safety Instructions .....	3
In the Box & Features .....	4
Powering the Unit .....	5
Loading Music onto the Unit using Windows XP .....	6
Playing Music on the Unit .....	7
Using the Microphone to Record Audio .....	8
Main Menu .....	9
Ô [ } c l [   • Á æ } ä Á Ö ^ , } ä c ä [ } • .....	10-11
Service Information .....	12



# Warnings and Precautions

---

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that could result in electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Refer servicing to qualified service personnel.

 
**WARNING:** This equipment should not be used by individuals who are not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## In the Box

---

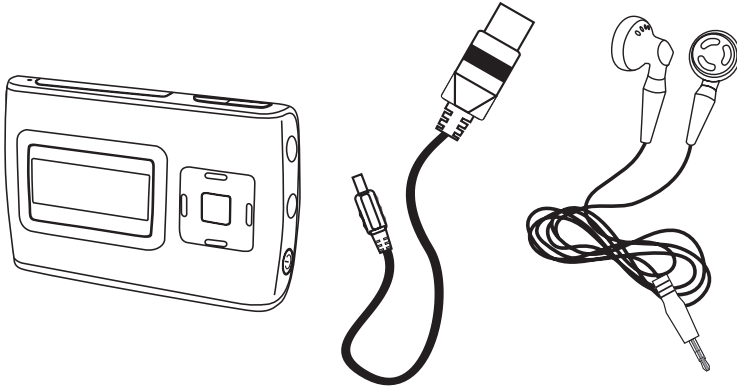

- 
- Mp3 Player
  - USB Cord
  - Earbuds
  - Documentation

## Features

 
 
---

- WMA™/MP3 Player with 1GB\* Installed Flash Memory
  - Backlit LCD Display is ID3 Tag Compatible
  - DRM Compliant
  - Plug and Play
  - 6-Preset EQ: Normal, POP, Rock, Jazz, Classic, Bass
  - Electronic Volume
  - Player uses 1-'AAA' Battery, (not included)
  - The amount of memory your operating system reports may vary from the stated memory of this device.
  - SD™/MMC Expansion Slot - increase memory size
  - Virtual Hard Drive - USB Mass Storage
  - USB Connection, USB Cable, included
  - Supports USB 2.0 High Speed
  - Dual Stereo Headphone Jacks
  - 1-Set Stereo Earbuds, included
  - System Requirements: Windows™XP
  - On-Line WMA™ music downloads with DRM require Windows™ XP & Windows Media Player™10
-

## Powering the Unit

---

The unit is powered by a single AAA-Size Battery (not included).

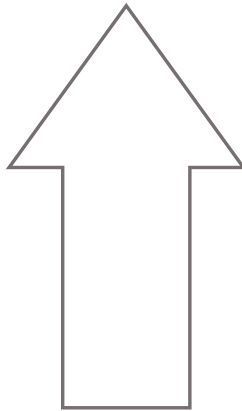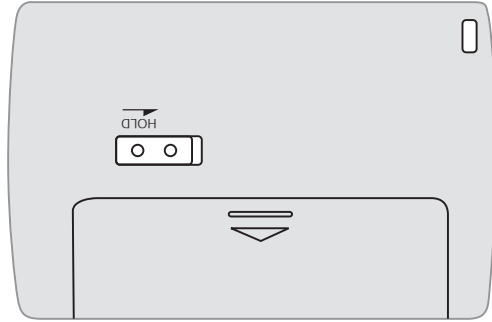

# Loading Music onto the Unit using Windows XP

- 1 Connect the unit to the computer using the included *USB Cord*.

*Microsoft Windows XP should immediately recognize that the unit is connected.*

- 2 Press the **Menu Button** on the unit until the LCD Display reads *MTP*.

- 3 Click the *Start Button* on the computer, then double click the *My Computer* icon.

- 4 Double Click on the drive labelled *Audio Player*.

- 5 Double Click on the icon labelled *Audio Player*.

*The Mic Folder stores any audio recorded from the built in microphone on the unit.*

*The Music Folder stores MP3s or YOC"cwffkq"Łngu"vjcv"jcxg"dggp" loaded onto the unit.*

*\* If the Music Folder does not appear, right-click and select New Folder, and name the new folder "Music".*

 
- 6 Drag and Drop or Copy and Paste ORS"qt"Y OC"cwffkq"Łngu"htq o"vjg" computer to the *Music Folder*.

*Audio Files, on Windows XP, are typically stored in the My Music Folder.*



*The unit can hold up to 1GB of data in the internal memory.*

- 7 Disconnect the unit from the computer.

## MP3 Player



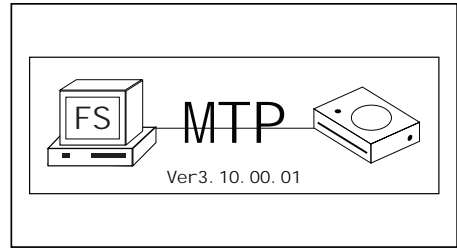


## Computer

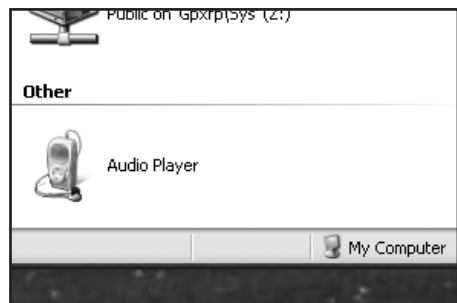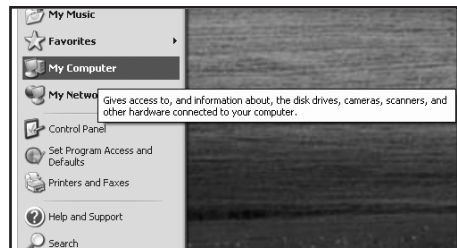  


## Playing Music on the Unit

   
- 1 After loading music into the internal memory or inserting an SD or MMC memory card with MP3 or WMA files, press the **Power Button** to turn the unit on.
  - 2 Press and hold the **Menu Button**.
  - 3 Use the **Skip/Search Buttons** to select the *Music Icon*.
  - 4 Press the **Menu Button** and select *Internal Memory* if the audio to be played is stored on the internal memory. Select *External Memory* if the audio to be played is stored on a loaded SD or MMC memory card.
  - 5 Use the **Skip/Search Buttons** and **Play/Pause Buttons** to navigate through the selection.
  - 6 Plug a set of headphones, or the included earbuds into one of the **Headphone Outputs**.
  - 7 Press the **V+** or **V-** Buttons to adjust the volume of the unit.
- :" Y jgp"Łpkujgf"nkuvgpkpi."rtguu"cpf" hold the **Power Button**.

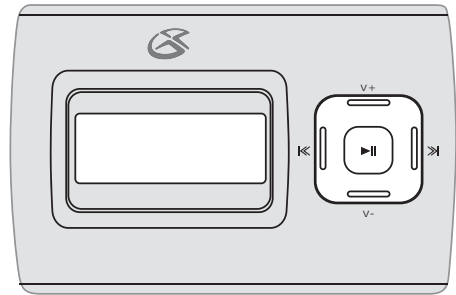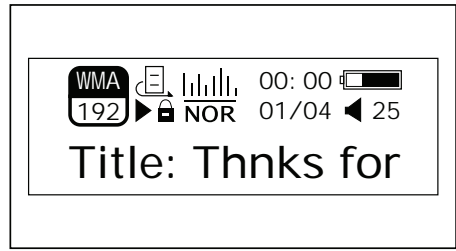

## Compatible Memory Cards

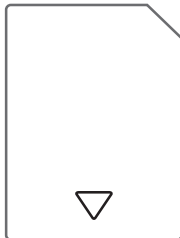 

MMC

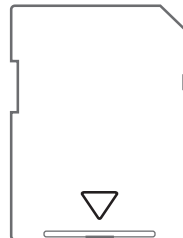 

SD

## Using the Microphone to Record Audio

1 With the unit powered on, press and hold the **Menu Button** to access the menu.

2 Select the *Voice Icon*.

" , "Kh"pq"Łngu"jcxg"dggp"tgeqtfgf."vjpg"  
Xqkeg"keqp"ykm"pqv"dg"cxckncdng0"Vq"  
tgeqtf"c"Łng"ykvjqwv"iqkpi"vq"vjpg"  
*Voice Icon, go to Music Mode, and press and hold the **Record Button** to begin recording audio through the built-in **Microphone**.*

3 Press and hold the **Record Button** to start recording audio through the built-in **Microphone**.

 
 
4 Press the **Play/Pause Button** to pause and continue the recording.

5 Press the **Record Button** to stop recording.

*In Music Mode, press and hold the **Record Button** to begin recording audio through the built-in **Microphone**.*

*Audio can only be recorded onto the Internal Memory.*

6 To play previously recorded audio, select the *Voice Icon* in the menu, then skip through and play the audio Łngu"vjpg"uc o g"yc{"Łngu"ctg"rnc{gf"kp"  
*Music Mode. (See "Playing Music on the Unit" on page 7)*

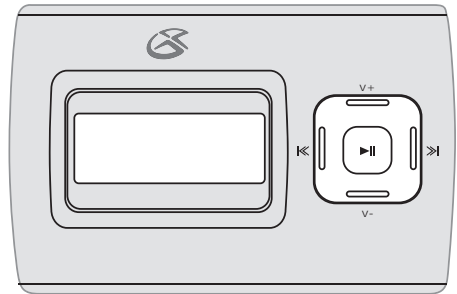

# Main Menu

---

Press and hold the **Menu Button** to access the Main Menu. Press the **Play/Pause Button** to make selections in the menu.



### Music

Access the Music menu to play music files stored on the internal storage.



### Voice

Access the Voice menu to play voice recordings stored on the internal storage.



### Settings

Adjust the EQ, Play Mode, Display, Sleep Timer, Shutdown Time, and Record Settings.



### System

Access the System menu to view the current storage capacity and to switch between English, Español, and France.



### Exit

Select the Exit Icon to return to the last used mode (either *Music* or *Voice*).



# Settings Menu

---



### Equalizer

Adjust the equalizer between six settings: Normal, Pop, Rock, Classical, Jazz, and Bass.



### Play Mode

Access the Play Mode menu to select a play mode: Normal, Repeat, or Shuffle.



### Display

Adjust the Contrast, Backlight, and Title Information.



### Sleep Timer

Set the Sleep Timer to 30, 60, or 90 minutes.



### Shutdown

Set the Shutdown time to 2, 5, or 10 minutes.



### Record Settings

Adjust the Record Settings to 8000Hz, 11000Hz, 16000Hz, or 22000Hz.



# System Menu

---



### Memory/FW

View the current storage capacity.



### Language

Switch between English, Español, and France.



### Load Defaults

 
Restore the unit's settings to the factory default.



### Delete All


Delete all files stored on the internal storage.

# Controls

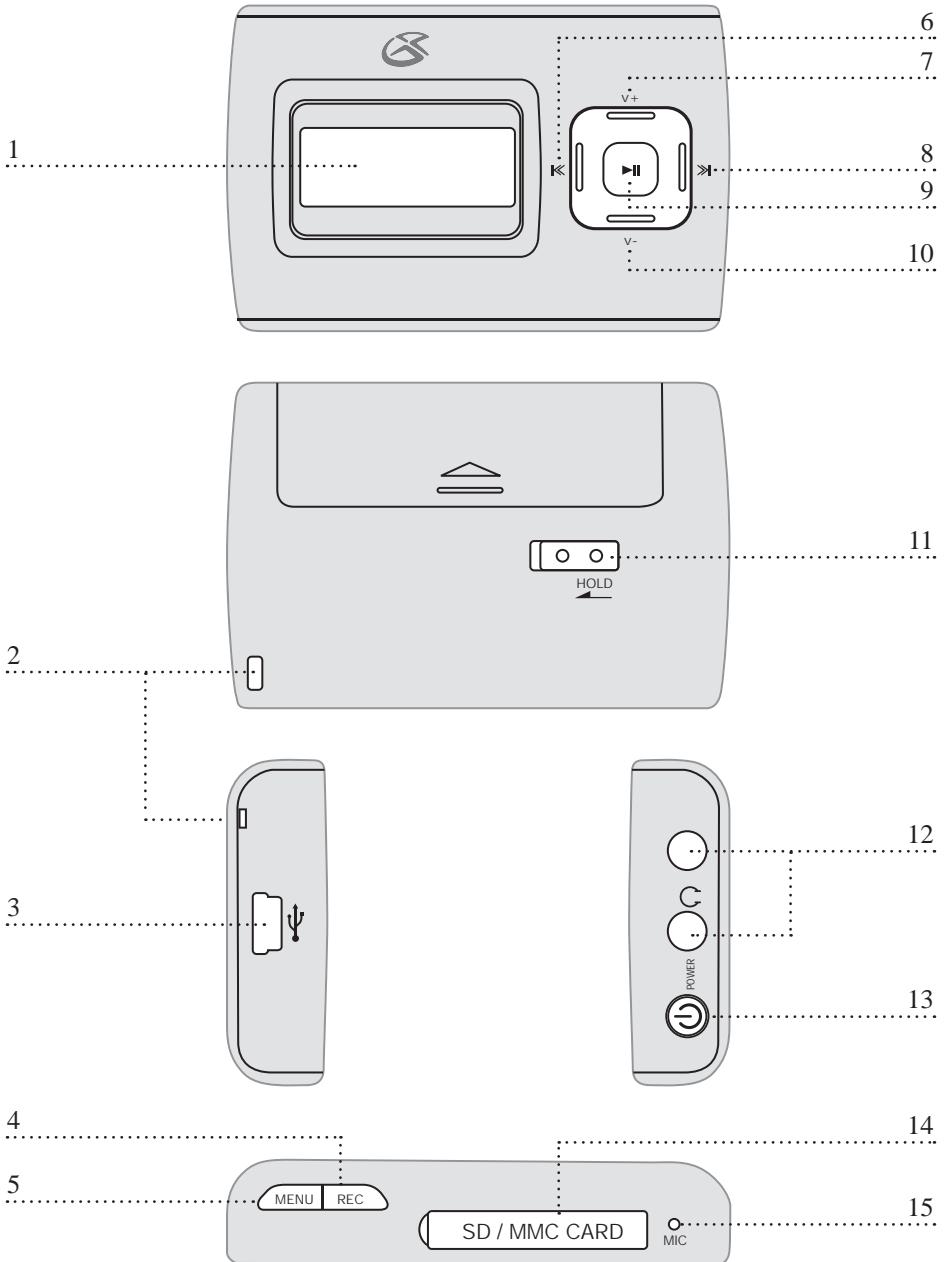

- 1 LCD Display**  
The LCD Display shows all of the unit's operations and music information.
- 2 Lanyard Connection**  
Use the Lanyard Connection to connect a lanyard or string to the unit.
- 3 Mini-USB Connection**  
Use the Mini-USB Connection and the included USB cable to connect the unit to a computer.
- 4 REC (Record) Button**  
Press the REC Button to record a voice or sounds into the microphone. *(The unit can only record onto the internal memory.)*
- 5 Menu Button**  
Press and hold the Menu Button to access the unit's menu. Press the Menu Button to navigate the internal or external memory on the unit.
- 6 - (Skip/Search) Button**  
Press the Skip/Search Button to skip between tracks. Press and hold the Skip/Search Button to search through an individual track.
- 7 V+ (Volume) Button**  
Press the V+ Button to increase the unit's volume.
- 8 . (Skip/Search) Button**  
Press the Skip/Search Button to skip between tracks. Press and hold the Skip/Search Button to search through an individual track.
- 9 Play/Pause**  
Press the Play/Pause Button to play or pause an audio track on the unit.
- 10 V- (Volume) Button**  
Press the V- Button to decrease the unit's volume.
- 11 Hold Switch**  
Use the Hold Switch to lock the keys on the unit to keep them from accidentally getting pushed.
- 12 Headphone Outputs**  
Use the Headphone Outputs to listen to music from the unit on a set of headphones or earbuds.
- 13 Power Button**  
Press and hold the Power Button to turn the unit off and on.
- 14 SD/MMC Card Slot**  
The SD/MMC Card Slot is a receptacle for SD and MMC memory cards.
- 15 MIC (Microphone)**  
The Microphone records external audio from the unit when in *Voice* or *Music Mode*.

## LCD Display

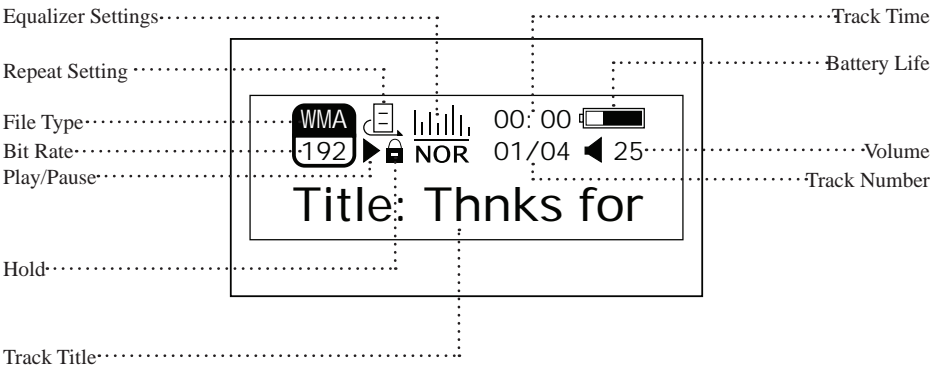 



## Service Information

---

**Address** 2116 Carr Street, St. Louis MO, 63106

**Phone** 1-314-621-2881

**Fax** 1-314-588-1805

**Email** [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

**Website** [www.gpx.com](http://www.gpx.com)

---

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.gpx.com](http://www.gpx.com).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.gpx.com](http://www.gpx.com).

---