



R1007 INSTRUCTION MANUAL

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.


WARNING: Danger of explosion if the unit’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

*Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.*

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


How to Use This Unit

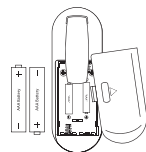

Powering the Unit

The Unit is powered by 2 AAA-Sized Batteries, not included. Simply slide the battery compartment lid in the direction of the engraved arrow, to expose the battery compartment and load or unload the unit with batteries. (Batteries not included)

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

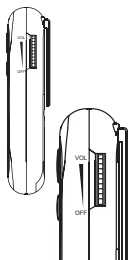


Turning the Unit Off and On

Use the Volume dial to turn the unit off and on.

To Power the unit on, turn the volume up. The dial will click, and the Power Indicator Light on the front of the unit will illuminate red.

To Power the unit off, turn the volume down until the dial clicks and the Power Indicator Light goes dark.

Press the RESET button to reset the unit to the lowest frequency.

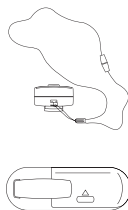


Carrying the Unit

The Unit has two features that allow it to be easily taken anywhere.

The lanyard can be connected to the lanyard connection. The unit can then be worn around your neck, or it can be tied to a backpack or jacket.


The Belt Clip allows you to secure the unit onto your clothing.

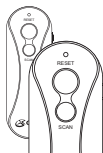

Scanning FM Radio Frequencies

When the SCAN button is pressed, the unit will begin scanning, starting at the lowest numbered FM frequency. The unit will scan to the first available FM Frequency. Press the SCAN button again to continue scanning up the FM Frequency

Features & Peripherals

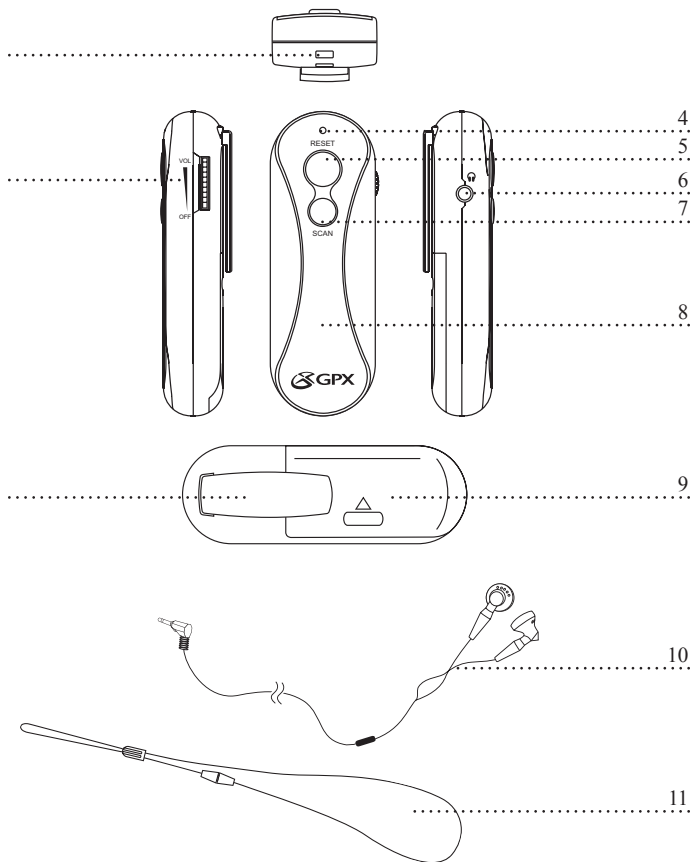

Features & Peripherals Defined

- 1 Lanyard Connection** Connect the included Lanyard to the Lanyard Connection.
- 2 Volume** Turn the Volume dial to power the unit on and off, and turn the volume up and down.
- 3 Belt Clip** Use the Belt Clip to secure the unit onto clothing.
- 4 Power Indicator**
- 5 RESET** Press the RESET button to reset the unit to the lowest FM Frequency.
- 6 Headphone Jack** Connect headphones or the included earbuds to the Headphone Jack to listen to the music.
- 7 SCAN** Press the SCAN button to scan up through the FM Frequencies.
- 8 Faceplate** The faceplate can be removed and exchanged by pulling up on the faceplate at the bottom edge.
- 9 Battery Compartment (Requires 2 AAA-Sized Batteries, not included)**
- 10 Earbuds** Use the Earbuds to listen to FM radio through the unit.
- 11 Lanyard** Connect the Lanyard to the unit, and wear it comfortably around your neck.

Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email prodinfo@gpx.com

Website www.gpx.com

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.