



R1007

GUIDE DE L'UTILISATEUR

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.


Fonctionnement de l'appareil



Alimentation

Cet appareil est alimenté par 2 piles AAA, non fournies.

Pour ouvrir le compartiment à piles afin d'insérer ou d'enlever les piles, faites glisser le couvercle du compartiment à piles dans le sens de la flèche (piles non fournies)

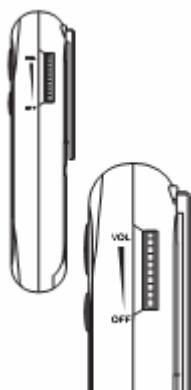

Mise en marche et arrêt de l'appareil

Utiliser la molette de Volume pour mettre en marche et éteindre l'appareil.

Pour mettre en marche l'appareil, augmentez le volume. L'écran clignote et le voyant lumineux rouge situé sur le côté avant de l'appareil s'allume.

Pour éteindre l'unité, diminuez le volume jusqu'à ce que l'écran clignote et que la lumière du voyant lumineux disparaisse.

Appuyez sur le bouton RESET pour réinitialiser l'appareil sur la fréquence la plus basse.




Transport de l'appareil

L'appareil possède deux caractéristiques permettant un transport facile.

La sangle peut être fixée. L'appareil peut alors être porté autour du cou ou être fixé à un sac à dos ou à une veste.


Le clip pour ceinture vous permet d'attacher l'appareil à vos vêtements.

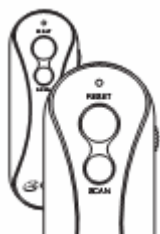

Recherche des Fréquences Radio FM

Lorsque vous appuyez sur le bouton SCAN, l'appareil démarre la recherche des fréquences FM les plus basses. L'appareil mémorise la première fréquence FM disponible. Appuyez à nouveau sur le bouton SCAN pour continuer la recherche vers les fréquences FM plus hautes.

Fonctions & Périphériques

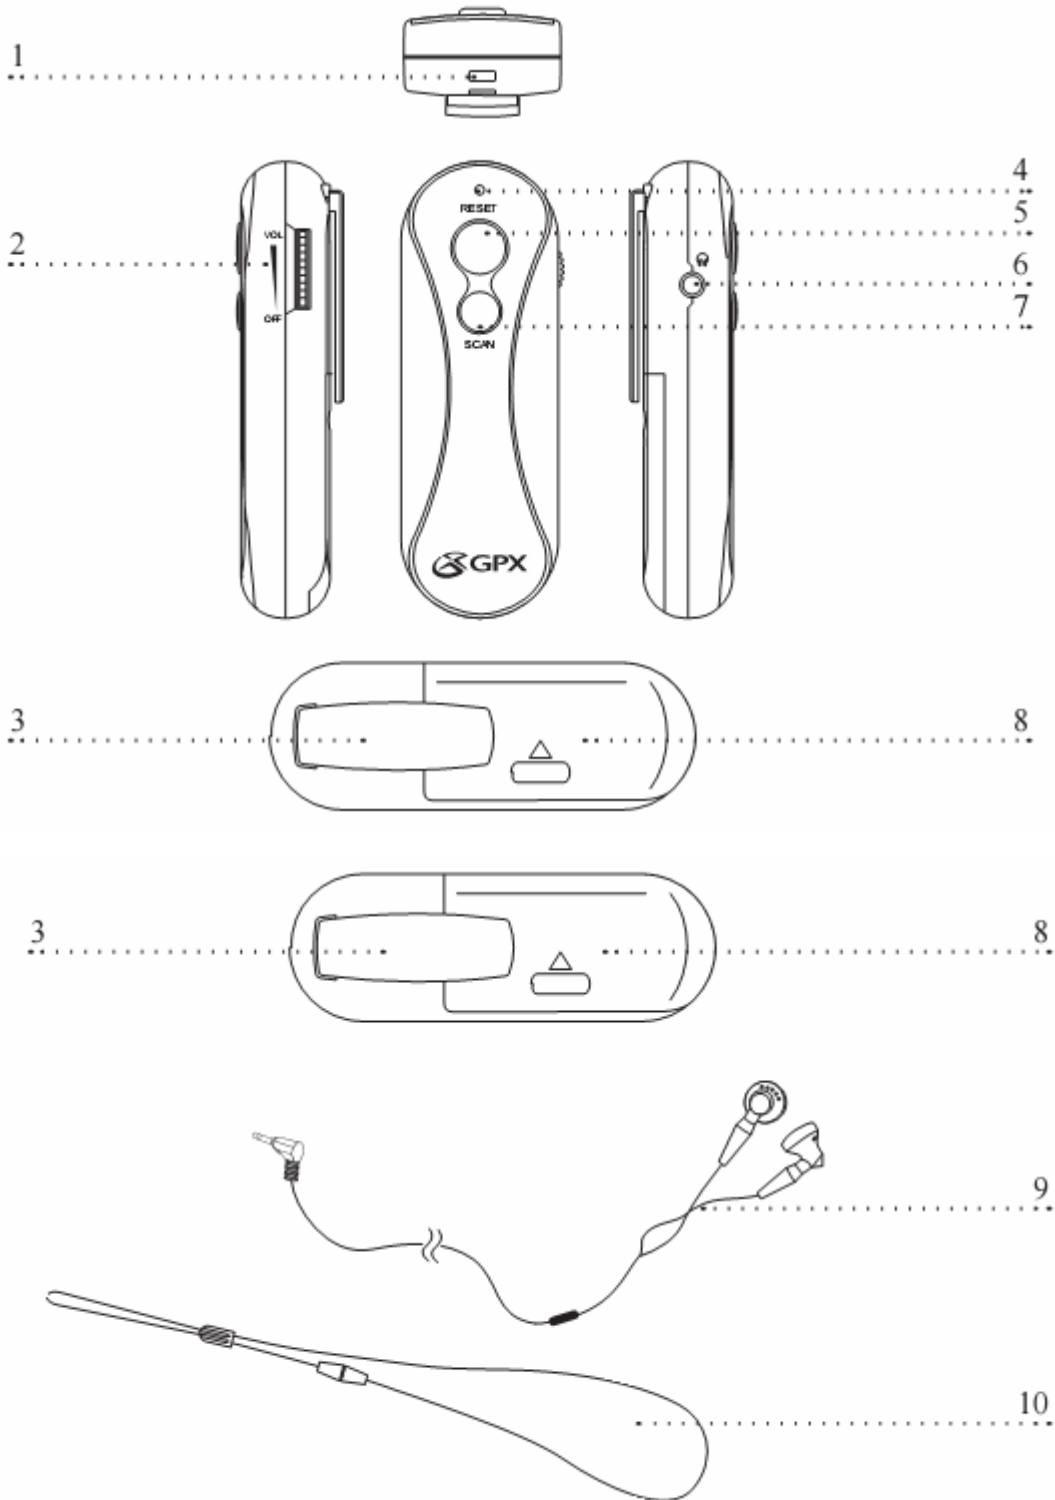

Explication détaillée des Fonctions & Périphériques.

1 Fixation de la sangle

Permet de fixer la sangle fournie à la boucle pour sangle.

2 Volume

Faites tourner la molette de Volume pour allumer et éteindre l'unité, ou augmenter et diminuer le volume.

3 Clip Ceinture

Utilisez le clip Ceinture pour attacher l'appareil à vos vêtements.

4 Voyant d'Alimentation

5 RESET

Appuyez sur le bouton RESET pour réinitialiser l'appareil sur la fréquence FM la plus basse.

6 Prise Casque

Raccordez votre casque ou les écouteurs fournis au connecteur Casque pour écouter de la musique.

7 SCAN

Appuyez sur le bouton SCAN pour rechercher des Fréquences FM.

8 Compartiment à piles (Requiert 2 piles AAA, non fournies)

9 Écouteurs

Utilisez les écouteurs pour écouter la radio FM à partir de l'appareil.

10 Sangle

Attachez la sangle à l'appareil afin de porter celui-ci en tout confort autour du cou.

Service d'information:

Adresse:

Téléphone:

Fax:

Email:

Site Web: